



- |                            |       |                              |       |
|----------------------------|-------|------------------------------|-------|
| 1. Air cap ring -          | L0215 | 11. Pick-up tube -           | L0214 |
| 2. Air cap -               | L0205 | 12. Paint container gasket - | L0335 |
| 3. Spray direction plate - | L0206 | 13. Paint container -        | L0201 |
| 4. Fluid tip -             | L0531 | 14. Viscosity cup -          | SG243 |
| 5. Fluid tip seal -        | L0211 | 15. Trigger -                | L0202 |
| 6. Fluid needle -          | L0550 | 16. Pivot pin -              | L0209 |
| 7. Spring -                | L0216 | 17. Hose assembly -          | L1219 |
| 8. Fluid adjusting screw - | L0210 | 18. Filter -                 | L0290 |
| 9. Gland nut -             | L0208 | 19. Shoulder strap -         | L1212 |
| 10. Gland seal -           | L0272 |                              |       |